


O150 (STNO-1) | Obstacle Marking Installation

Obstacles at or below 6 feet 6 inches (1981 mm) in height and projecting more than 4 inches (102 mm) into the egress path shall be outlined with markings no less than 1 inch (25 mm) in width comprised of a pattern of alternating bands of luminous and black at an angle of 45 degrees. Obstacles include standpipes, hose cabinets, wall projections and restricted height areas. Markings shall not conceal any required information or instructions on obstacles.

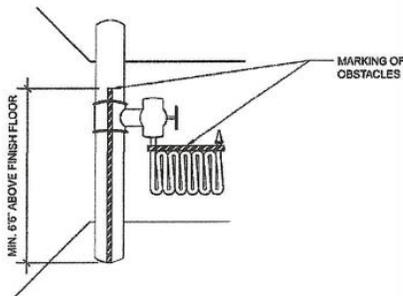

For compliant placement of obstacle markings, consult your applicable local or national codes (2009, 2012 IBC section 1024 +2015 IBC section 1025).

Installation Steps:

1. Thoroughly clean the surface area where markings are to be installed using isopropyl alcohol and a clean dry cloth to remove any loose particles, grease or dirt. Surface must be dry and dust free.
2. Cut to length with scissors.
3. Peel the backing from the obstacle marking material as you attach it to the surface, without touching the adhesive.
4. Place the markings as required, working from one end to the other applying firm pressure to affix to the surface.

Maintain by cleaning as needed with cloth and/or mild non-abrasive cleaner if needed.

Photo-Glo Charge Instruction:

Minimum of 1-foot candle (11 Lux) of fluorescent, incandescent or LED (light emitting diode) for 60 minutes is required to charge Photo-Glo.

Control of lighting restricted to authorized personnel. Reliable external illumination is always required during occupancy.

Do not use Photo-Glo where the ambient illumination level is less than 1-foot candle (11 Lux).

If you have further questions, please contact us:

Call: 1-855-723-6673 Email: sales@safetnose.com